


Doorsnede A-A

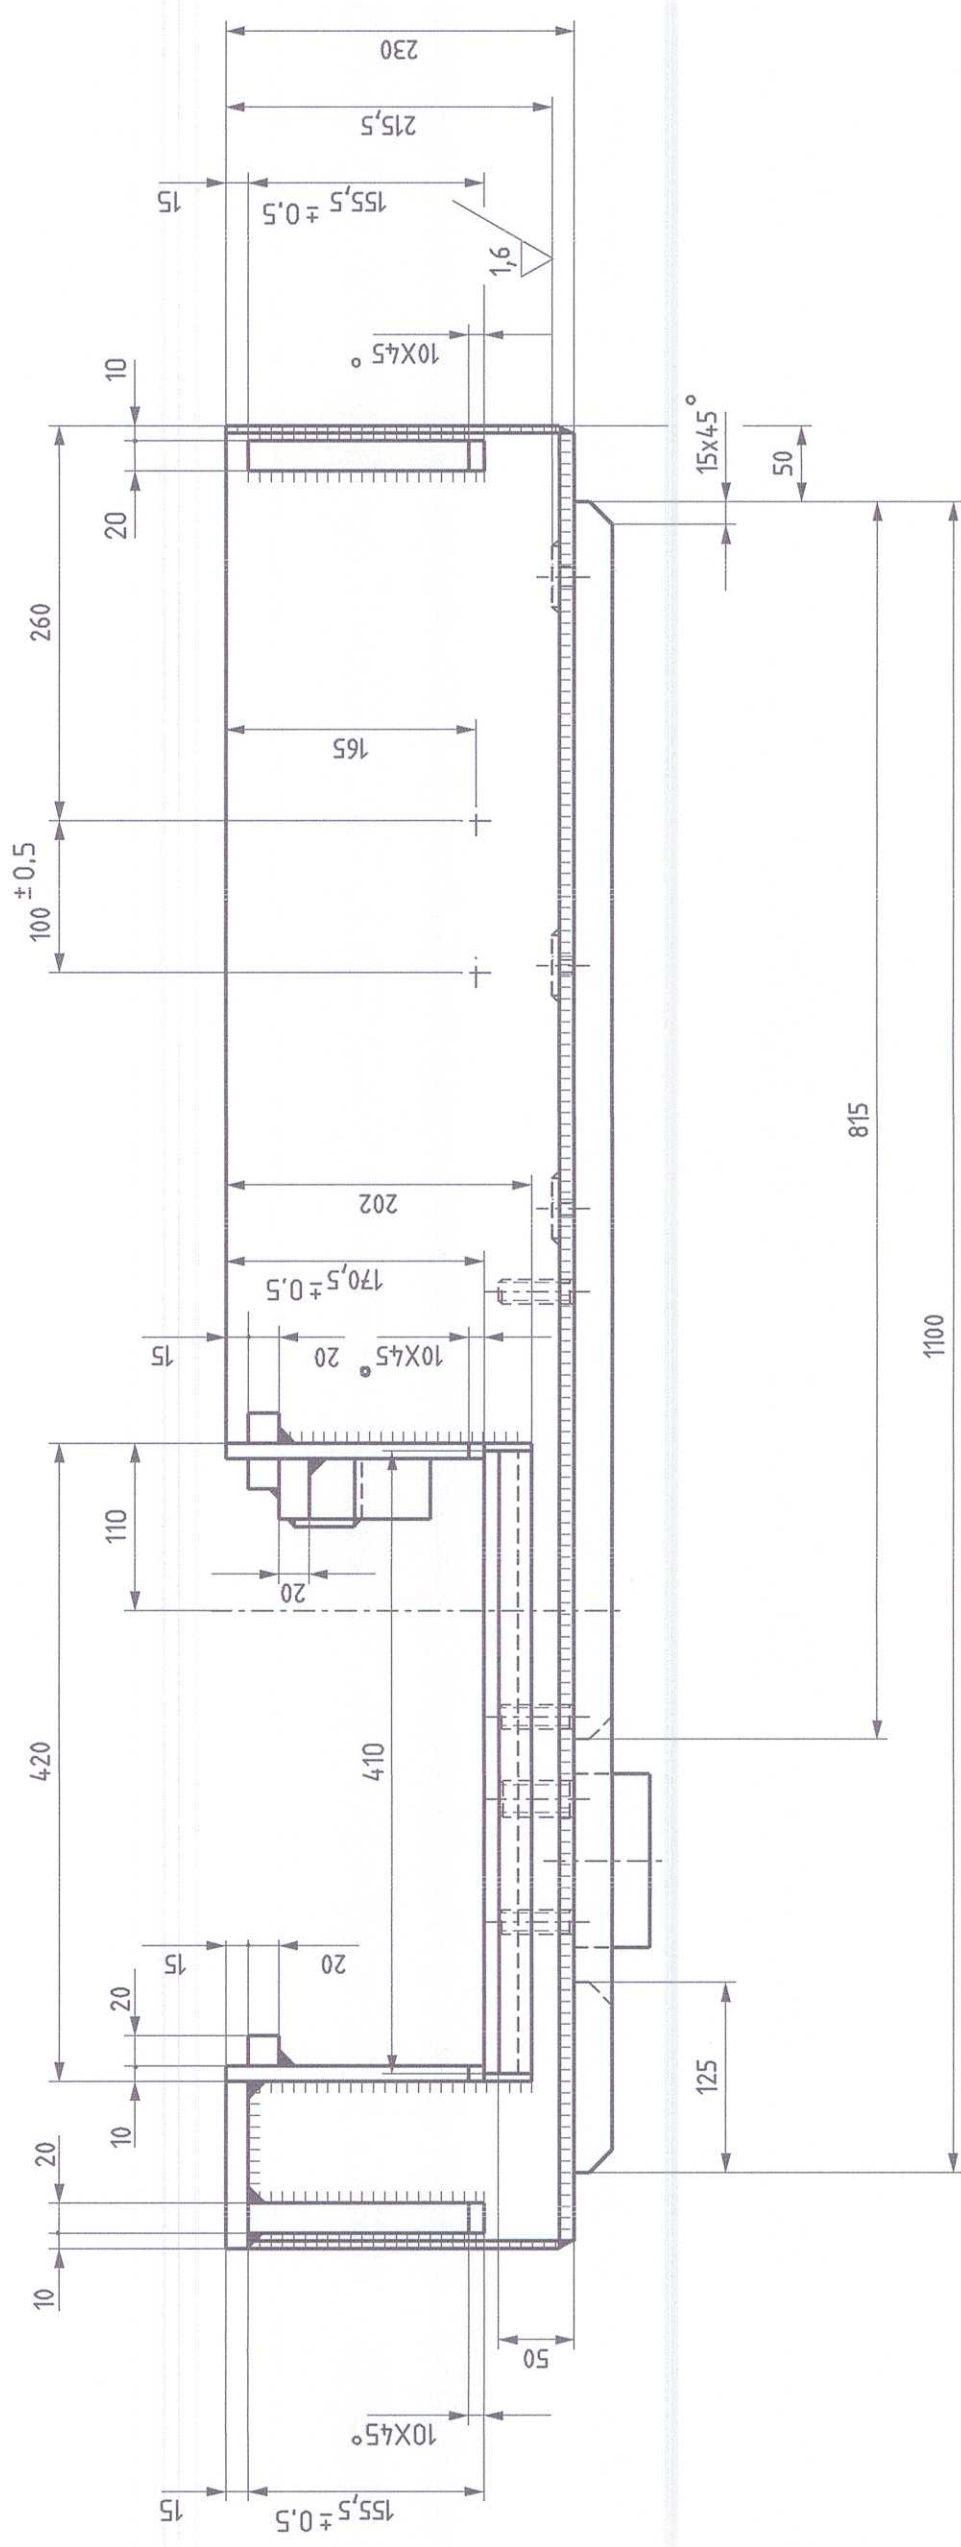

Behalve oplegstrippen (kettinglassen)
gehele wisselbak vastlassen (vol)